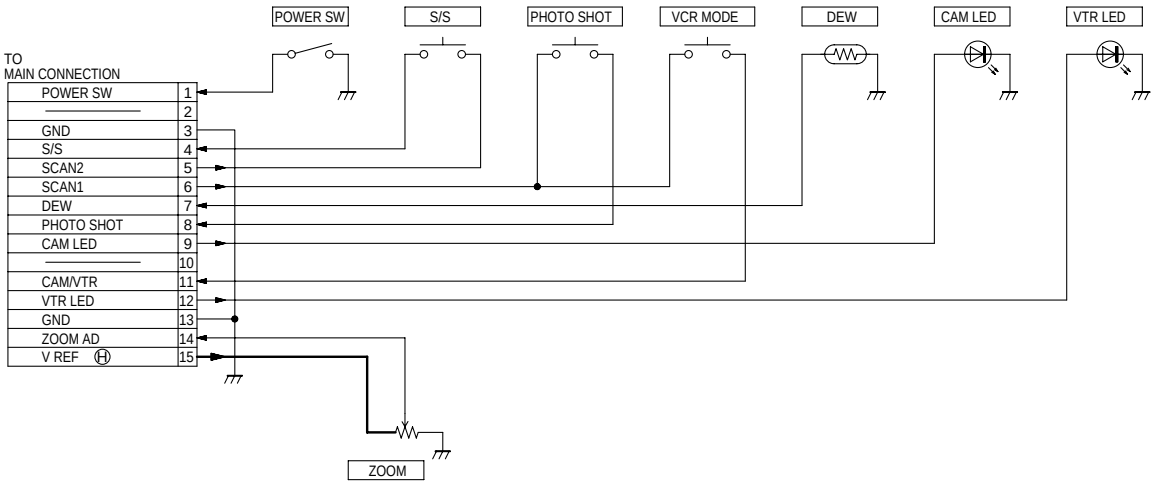
POWER SW
S/S
PHOTO SHOT
VCR MODE
DEW
CAM LED
VTR LED
TO
MAIN CONNECTION
POWER SW 1
2
GND 3
S/S 4
SCAN2 5
SCAN1 6
DEW 7
PHOTO SHOT 8
CAM LED 9
10
CAM/VTR 11
VTR LED 12
GND 13
ZOOM AD 14
V REF Ⓗ 15
ZOOM

C

B

A

1 2 3 4